


**Electronic motor brake relay BI 9034
ministop**



- Higher safety level and more economic by short stopping cycle
- Cost saving
- Compact design
- Easy to set-up, no need for current measuring instrument
- For all single and 3-phase asynchronous motors
- DC-brake with one way rectification up to max. 25 A
- Controlled by microcontroller
- Easily fitted to existing installations
- Wear free and maintenance free
- Integrated braking contactor
- DIN-rail mounting
- Adjustable braking current (controlled current)
- With integrated star-delta starting function
- With automatic standstill detection
- 90 mm Width

Circuit diagram

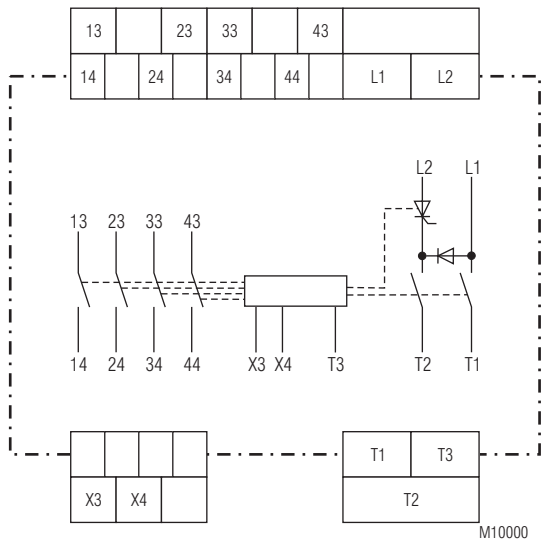

Approvals and Marking



Applications


- Saws
- Centrifuges
- Woodworking machines
- Textile machines
- Conveyors

Function

The supply voltage is connected to terminals L1-L2 and the interlock contact X5-X6 closes to enable the motor contactor. A green LED indicates operation. The motor can be started with an ON push button. Depending on the position of the rotary selector switch the motor starts direct on line or with star-delta start. The braking DC-voltage is generated on terminals T₁ and T₂.

The braking sequence is as follows:
Pressing the stop button de-energises the motor contactor. The closing of X3-X4 (contact of the motor contactor) starts the braking. After a safety time the braking contactor closes for the adjusted braking time and the braking current flows through the motor.

Block diagram

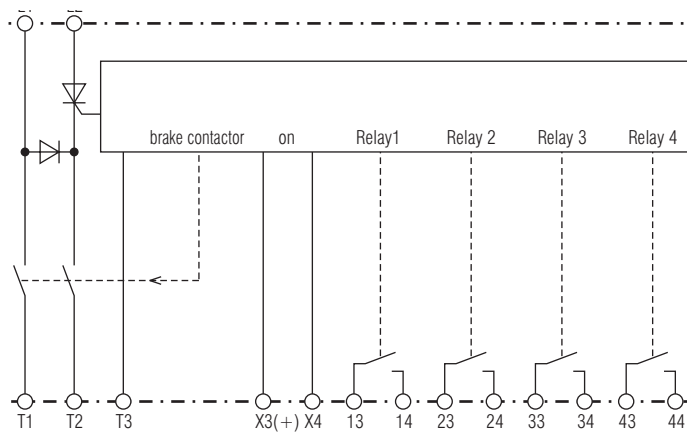


Notes

Terminal 3 is the measuring input for standstill detection. The BI 9034 can be also used without connecting T3. Standstill will be detected by the current measuring. It is important to make sure, that the braking current will flow longer than 2 s before stopping the motor. If the motor stops too early, the standstill will not be detected and the braking current will flow for the maximum braking time.


To have an optimum standstill detection make sure that the braking current is higher than the nominal current of the motor.

If the back-EMF of the motor drops only slowly the unit may have a braking delay of up to 2 s.

Function diagrams

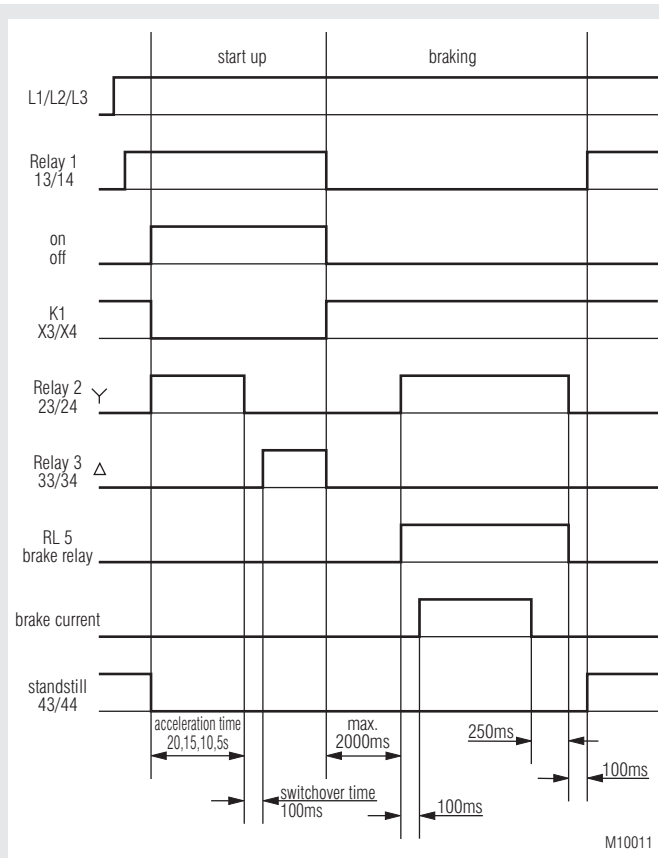

BI 9034 Function 1 ... 4

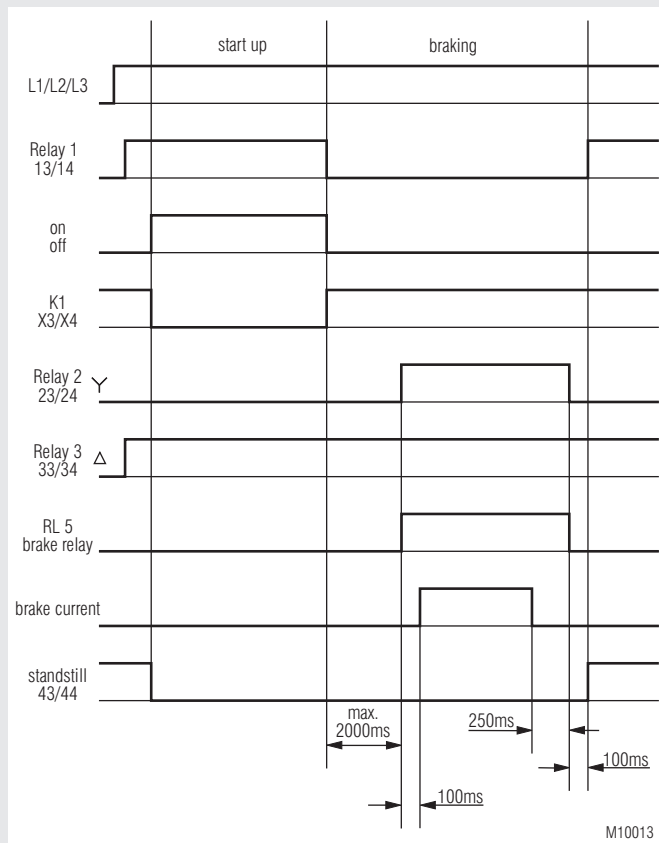

BI 9034 Function 5

Indication

LED green „RUN“:	- ready:	permanent on
LED red „Error“	- Mains frequency out of tolerance	1 flash
	- Braking current is not present:	2 flashes
	- Power semiconductors overheated:	flashes 3 times
	- Synchronisation signal is not present:	flashes 4 times
	- Temperature measuring circuit defective:	flashes 5 times
LED yellow „I _{Br} “	- max. braking time 11 s	permanent on
	- max. braking time 31 s	flashes

Technical Data

Nominal Voltage U_N:	AC 230 V ± 10 %, AC 400 V ± 10 %
Nominal frequency:	50/60 Hz ± 3 Hz
Permissible braking current::	10 ... 60 A _{eff}
Duty-cycle at max. braking current:	40 %
I²t-value of power semiconductors:	6600 A ² s
Braking voltage:	DC 10 ... 190 V
Braking delay for fade out of back EMF:	auto optimising (0.2 ... 2 s)
Nominal consumption for control circuit:	5 VA

Fuses

according to rule 1: Type gL / 60 A
according to rule 2: Type gR / I²t 6600 A²s

Contacts: 4 NO contacts 2 A / AC 400 V

Temperature range: 0°C ... + 45°C

Storage temperature: - 25°C ... + 75°C

Clearance and creepage distance

rated impuls voltage / pollution degree
Relay contacts to supply voltage: 4 kV / 2 IEC 60 664-1

EMC

Electrostatic discharge (ESD): 8 kV (air) IEC/EN 61 000-4-2

HF irradiation: 10 V / m IEC/EN 61 000-4-3

Fast transients: 2 kV IEC/EN 61 000-4-4

Surge

between wires for power supply: 1 kV IEC/EN 61 000-4-5

between wire and ground: 2 kV IEC/EN 61 000-4-5

Degree of protection

Housing: IP 40 IEC/EN 60 529

Terminals: IP 20 IEC/EN 60 529

Housing:

Thermoplastic with V0 behaviour according to UL subject 94

Vibration resistance: Amplitude 0.35 mm, Frequency 10 ... 55 Hz, IEC/EN 60 068-2-6

Climate resistance: 25 / 075 / 04 IEC/EN 60 068-1

Terminal designation:

Wire connection

Load terminals: 1 x 10 mm² solid

1 x 6 mm² stranded ferruled

A current of 60 A or 80 A is permitted at a.m. duty cycles for 6 mm² wiring

1 x 4 mm² solid or

1 x 2,5 stranded ferruled (isolated) or

2 x 1,5 mm² stranded ferruled (isolated)

DIN 46 228-1/-2/-3/-4 or

2 x 2,5 mm² stranded ferruled

DIN 46 228-1/-2/-3

Technical Data

Wire fixing

Load terminals:	Plus-minus terminal screws M 4 box terminals with self-lifting clamping piece	
Control terminals:	Plus-minus terminal screws M 3,5 box terminals with self-lifting clamping piece	
Mounting:	DIN rail	IEC/EN 60 715
Weight:	780 g	

Dimensions

Width x height x depth: 90 x 85 x 120 mm

Standard type


BI 9034 60 A AC 400 V 50 / 60 Hz 2 ... 11 s

Article number: 0062127

- Integrated braking contactor
- DIN-rail mounting
- Width: 90 mm

Ordering example

BI 9034 60 A AC 400 V 50 / 60 Hz 2 ... 11 s

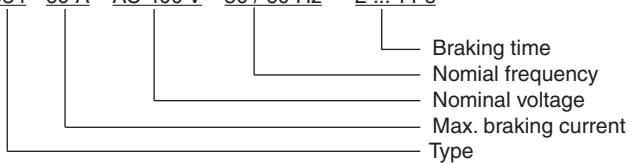

Variants on request

- Second control input e.g. to interrupt braking cycle
- 2 galvanic separated DC 24 V inputs e.g. for control via PLC
- Braking time 1 ... 31 s or to customers specification
- Relay function to customers specification
- Special voltages on request
- Device with time controlled braking cycle, without stand still monitoring, without star-delta-control on request

Control input

By opening a contact (motor contactor switches on) on terminals X3 (+24vV) and X4 (signal) star-delta starting begins when function 1...4 is selected. After the adjusted time delay the delta contactor comes on and the brake units waits for the closing of the contact on X3-X4 (stop button is pressed). After closing of this contact the braking cycle starts.

Monitoring output

13, 14:	Interlock contact for motor contactor.
23, 24:	Control of star contactor of a star delta starter during start and braking.
33, 34	a) Control of delta contactor when function 1...4 is selected b) ready signal when function 5 is selected
43, 44	Standstill signal, resets on motor start or in case of a failure.

On device failure all contacts open

Adjustment facilities

Potentiometer	Description	Initial setting
I _B	Braking current	Fully anti-clockwise
Fkt	Function	Fully anti-clockwise

The braking current is controlled according to the adjusted value in Ampere.

For optimum braking the setting of the current should be max. 1.8 to 2 times the motor current. This corresponds to the saturation current of the magnetic field used to brake the motor. A higher current only overheats the motor. A higher braking efficiency can be obtained by using 2 or more stator windings. The permitted duty cycle is depending on the actual braking current and the ambient temperature.

The different functions of the brake unit can be selected with rotary switch Fkt

Fkt 1 ... 4:	Star-Delta-control with internal timing Relay 1 - Motor contactor Relay 2 - Star-contactor Relay 3 - Triangle contactor Relay 4 - Stand still
--------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------

Acceleration time (star-contactor):	1 - 20 s 2 - 15 s 3 - 10 s 4 - 5 s
----------------------------------------	---------------------------------------------

Fkt 5:	Star-Delta-control with external timing Relay 1 - Motor contactor Relay 2 - Star-contactor Relay 3 - Ready Relay 4 - Stand still
--------	----------------------------------------------------------------------------------------------------------------------------------------------


Set-up procedure

- Connect the motor brake relay BI 9034N in accordance to the connection example and make sure to connect the same phases between (L1, L2) and (T1, T2). Make sure that the interlocking contact 13, 14 is wired in series to the coil of the motor contactor so that the motor contactor cannot switch on, while the braking current is flowing
- Select function with rotary switch Fkt
- Set the braking current on potentiometer I_B. To avoid overloading of the motor set the current to max. two times the nominal motor current
- The braking time of the BI 9034 cannot be adjusted. Due to the standstill detection it is self-optimizing. If L3 is not connected to T3, standstill detection is provided by measuring the braking current.
- If no standstill is detected, the BI 9034 stops braking after 10 s e.g. 30 s


Fault indication by flashing code

Flashes	Fault	Reason	Failure recovery
1 x	Mains frequency out of tolerance	Wrong mains frequency	Device not-suitable for the frequency. Contact manufacturer
2 x	Braking current is not present	Braking current circuit broken	Check the wiring
		Motor coil resistance is too high	Set braking current lower until the error disappears
3 x	Power semiconductors overheated	Permitted duty cycle exceeded	Decrease braking current and set the braking time longer Wait till heat sink cools down
4 x	Synchronisation signal is not present	Unit defective	The unit has to be repaired
		or temporary interruption of power supply	Switch unit Off and On
5 x	Temperature measuring circuit defective	Unit defective	The unit has to be repaired
		or overtemperature on power semiconductors while switching on	Wait till heat sink cools down

Connection examples

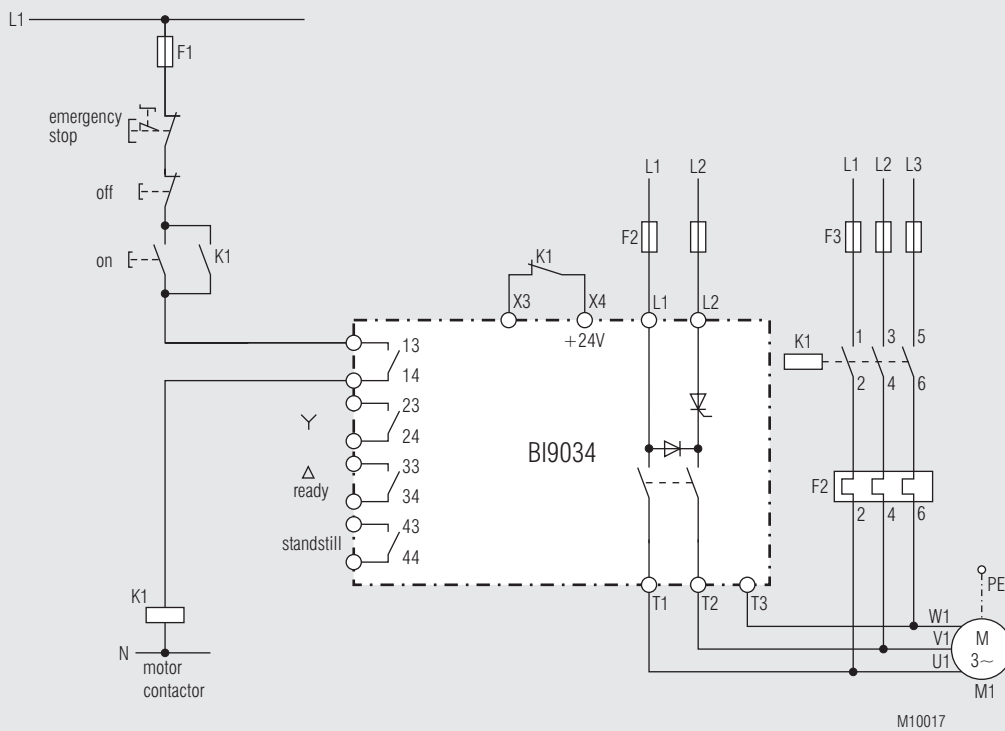


BI 9034 without star-delta-control

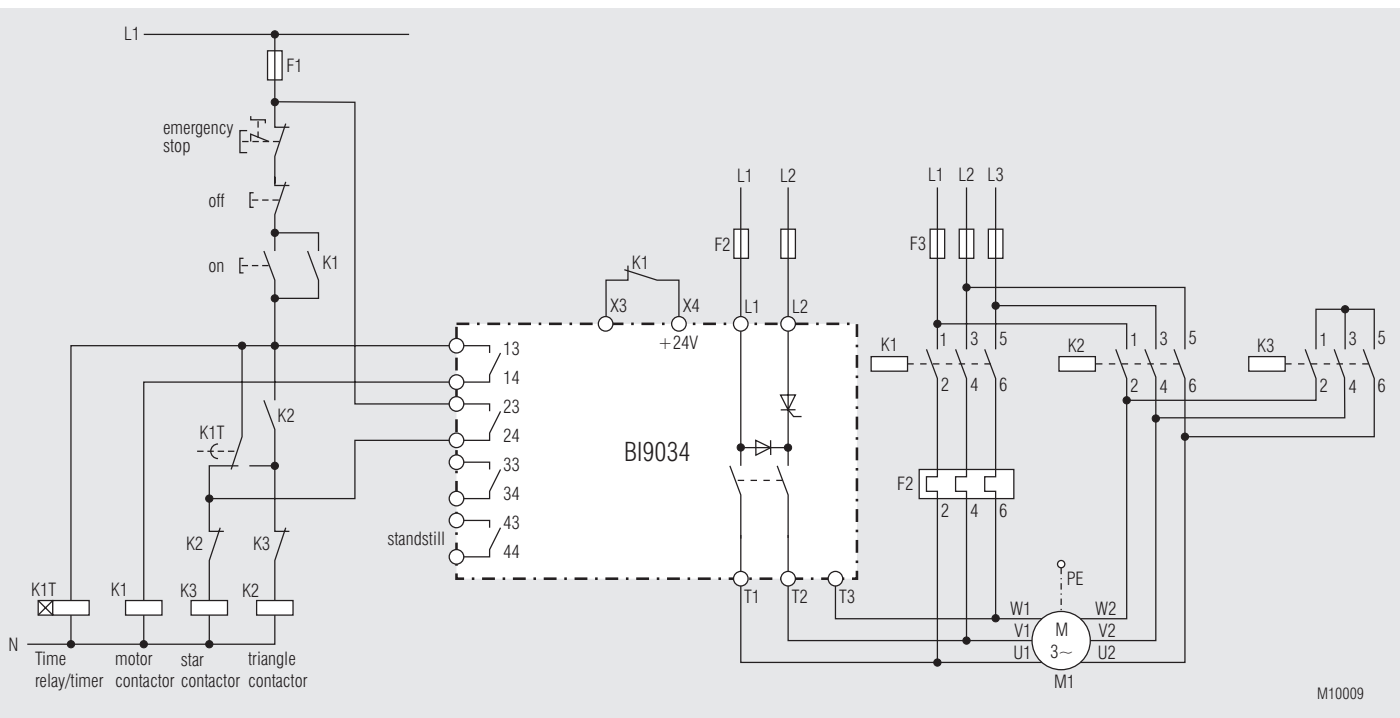

BI 9034 with external star-delta-control

Connection example

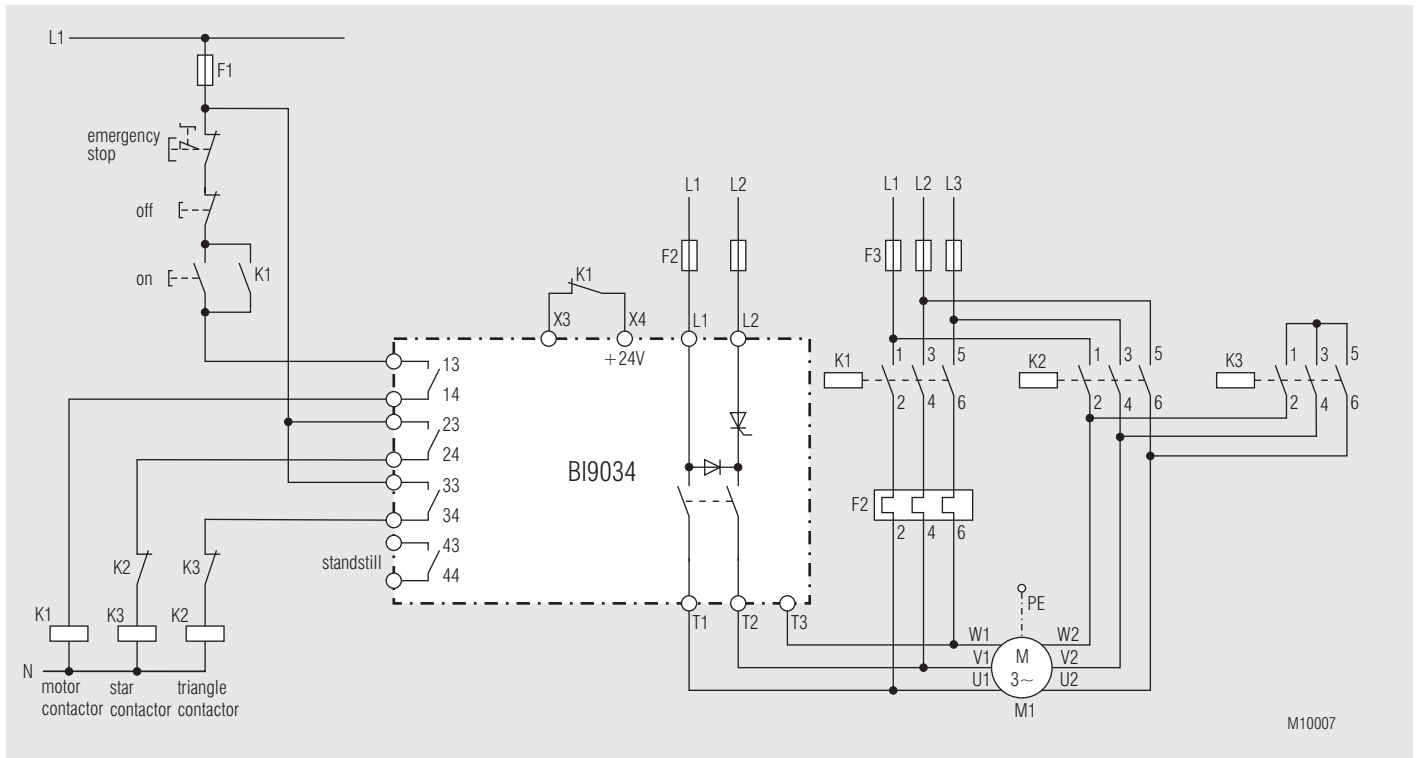

BI 9034 with internal star-delta-control